


ULTRALINE[®]

From Allied Moulded Products 

Aluminum Hinged Front Panel

Installation Instructions

HFPU120

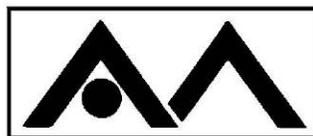

**ALLIED
MOULDED
PRODUCTS, Inc.**


222 N. Union St. Bryan, OH 43506
PH: 419-636-4217 • FAX: 800-237-7269

www.alliedmoulded.com

INST-HFPU120


HFPU120 ASSEMBLY

1

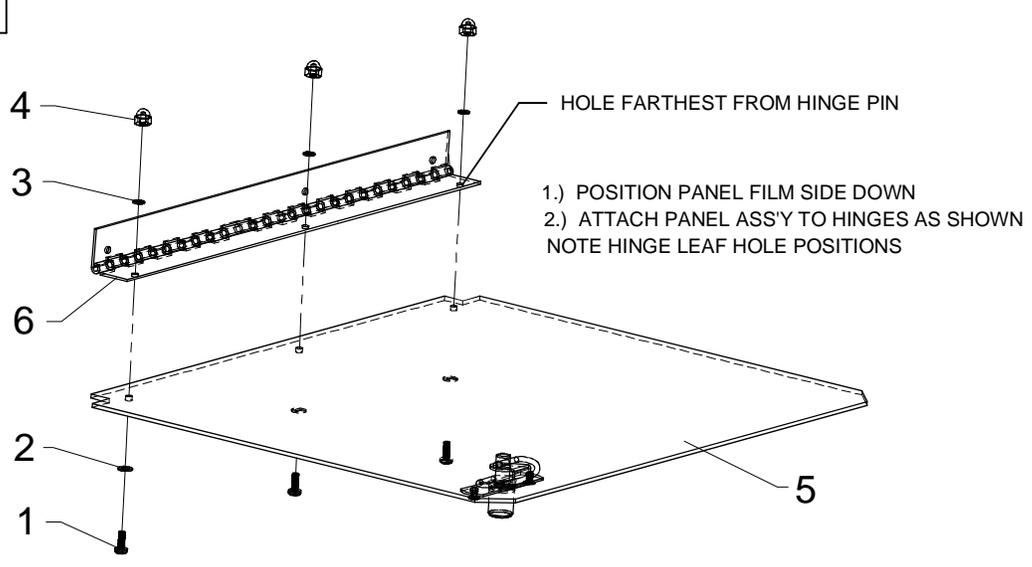


HFPU120

- 1) #6-32 x 3/8 SCREW (3)
- 2) #6 FLAT WASHER (9)
- 3) #6 LOCK WASHER (6)
- 4) #6-32 ACORN NUT (6)
- 5) U60830 PANEL/LATCH ASS'Y (1)
- 6) 70-60805 9" HINGE (1)
- 7) 70-UPANST1214 PANEL STOP (1)
- 8) 70-UPANST1214EX EXTEND PANEL STOP (1)
- 9) #10-32 x 5/16 SCREW (2)
- 10) #10-32 x 7/16 SCREW (2)
- 11) #6-32 x 3/4 SCREW (3)
- 12) 70-UDGS120 DRILL GUIDE (1)
- 13) 70-60431NYLON (3)

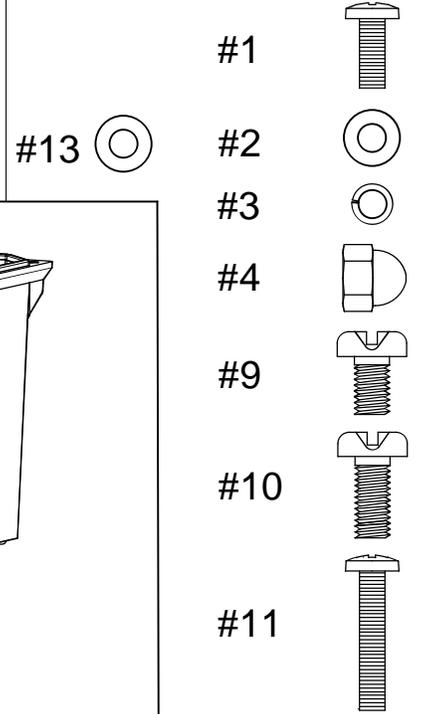

2

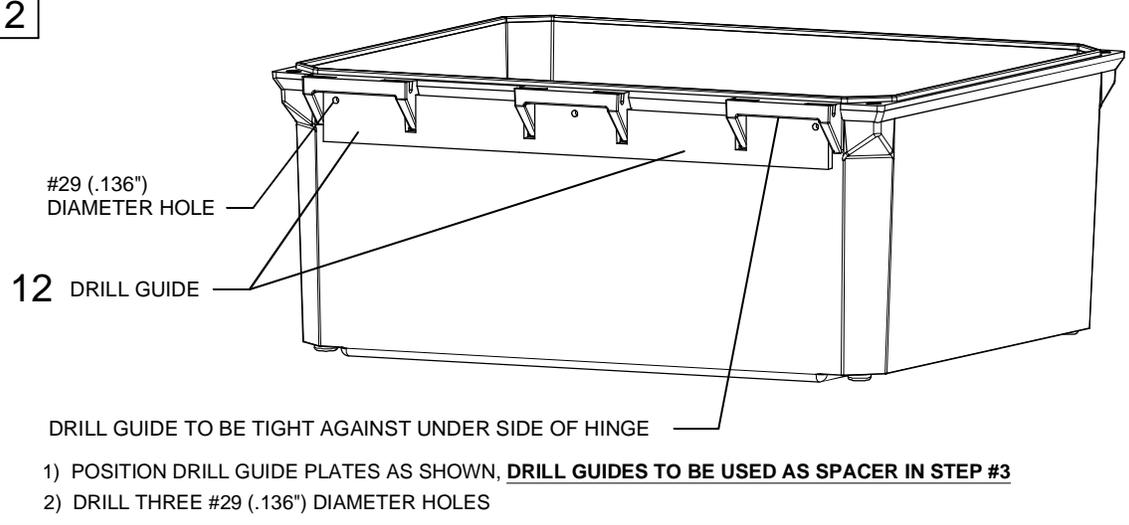

3

- 1) PLACE WASHER #13 ONTO SCREW #11 AND INSERT #11 & #13 THROUGH WALL OF BOX, PLACE DRILL GUIDE #12 (USED AS SPACER) BETWEEN THE BOX INSIDE WALL AND HINGE #6
- 2) ASSEMBLE PANEL STOPS #7 & #8 WITH TWO SCREWS #9 OR #10 WITH ENCLOSURE BACK PANEL. PANEL STOPS SHOULD LAY AGAINST THE BOX WALL

